



CMH1309 series

Comparison between Version 1.0 & 2.0

始创于**2000**年, 产品畅销全球**100**多个国家


HAN'S YUEMING LASER FOUNDED IN 2000, PRODUCTS SOLD WELL IN MORE THAN 100 COUNTRIES

CMH1309 2.0 Appearance



Summary:


The machine consists of Cabinet, Cover, Transmission system and Worktable.

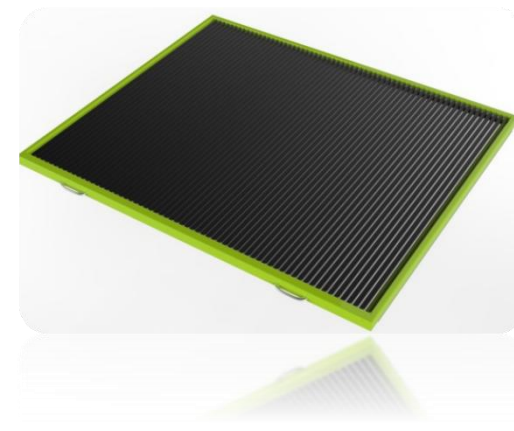


Comparison between CMH1309 Version 1.0 & 2.0

Outline Dimension

2.0

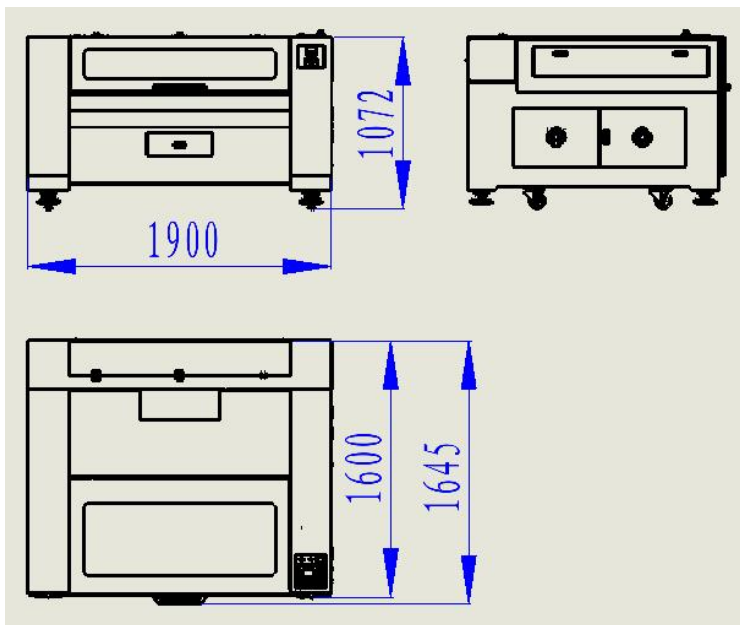


1.0

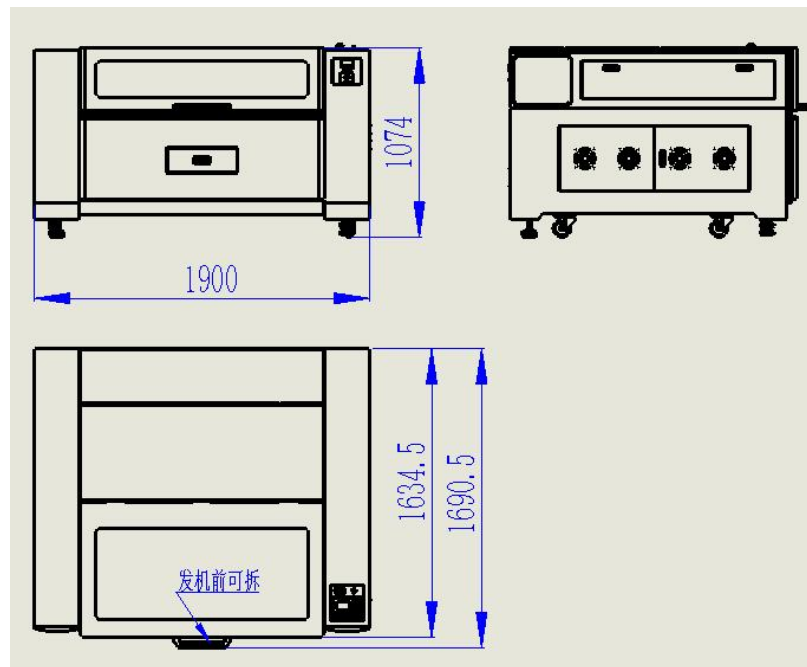

Appearance

2.0

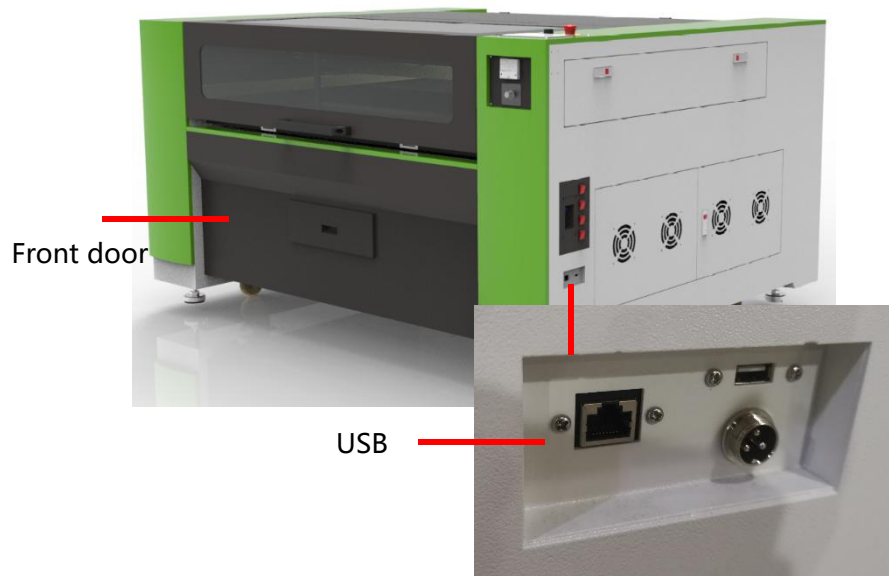

1.0



- The front cover is retracted, and the drawer is exposed.
- Cancel the drawer handle and change it with bending sheet.
- New structure Y-direction effective format up to 930mm
- Cancel the USB installation plate and install it directly on the chassis instead

Fan on the chassis

2.0



1.0



- Reduce the number of fan holes on the left and right doors
- Change the lock

Cover

2.0



Laser tube cover



1.0



- The light pipe cover is changed to be independent.
- The protruding metal sheet(black) in the middle is changed to be at grade with the decorative plate
- Modification of laser switch and emergency stop style

Connecting plate


2.0



for repairing or adding the upper suction system



1.0

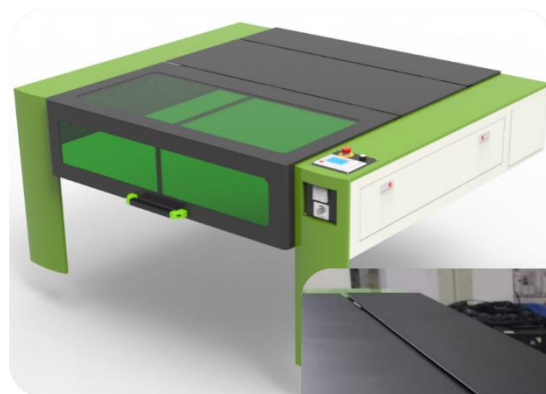


- Add a detachable door panel at the middle connecting cover plate, which can be used to repair the Y axis motor or to add upper blowing system (without replacing the middle connecting plate or making extra holes)

Up & Down table(appearance)

2.0



1.0

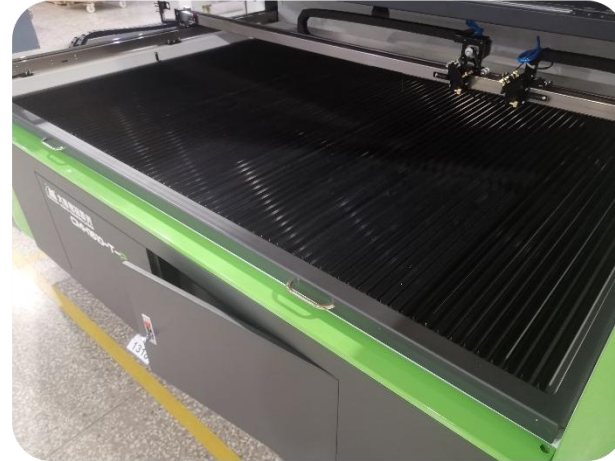

- There will be an extra magnetic door at front, which can be quickly opened to remove the internal drawers

Laser tube supporter

2.0



1.0




- The laser tube supporter is changed to specific plastic supporter.


Other upgrades

Waste collector (optional)

Standard

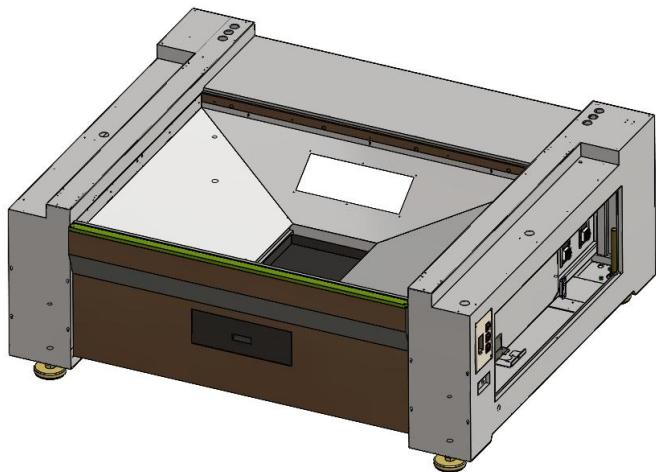

Optional (deeper)

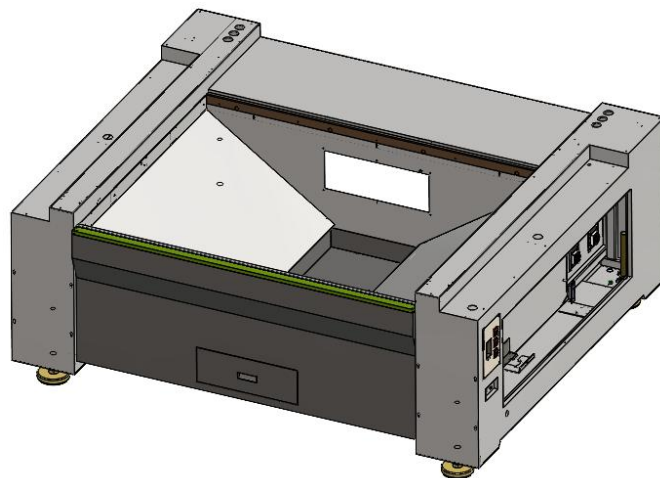


Two kinds of collector for different industries


Other upgrades

Deduct the external frame of the slat and honeycomb table

2.0

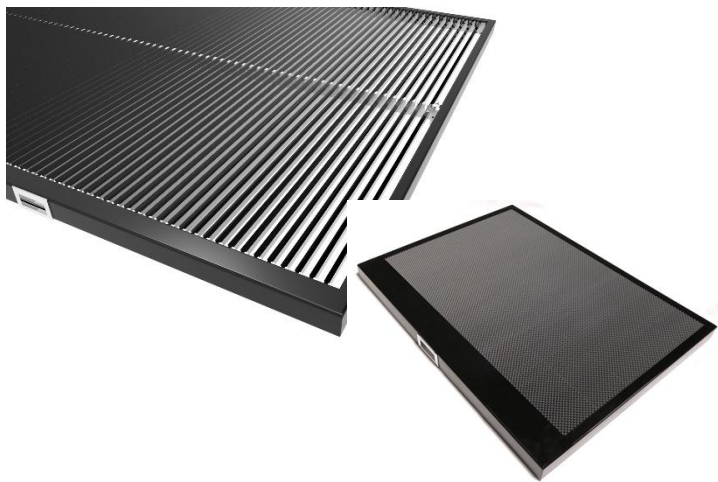

1.0

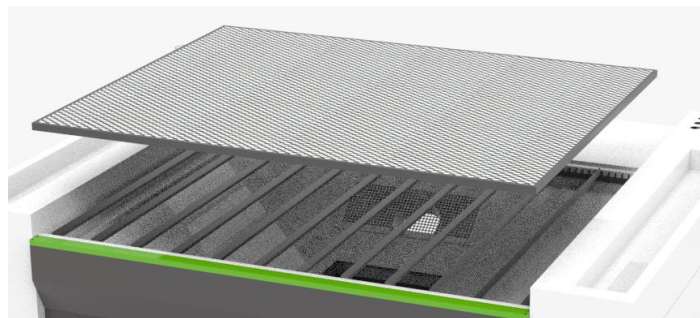


Deduct the external frame of the slate and honeycomb table

Use the slat as the frame of the table, and if the customer chooses honeycomb table, put the honeycomb onto the slat directly.

Other upgrades

Change the position of LED switch

2.0

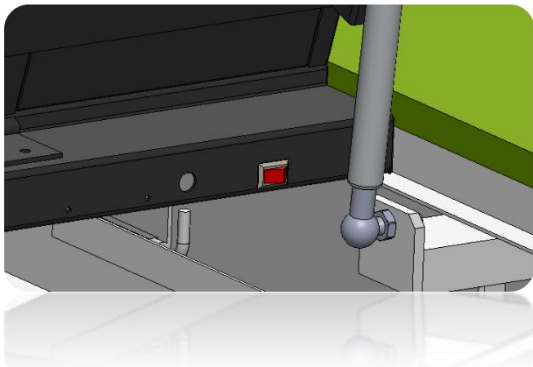

1.0


LED lamp




LED lamp

Change the LED lamp 300mm*2pc, 220V, to 500mm*2pcs, 24V, to reduce the difficulty of installation;

2.0

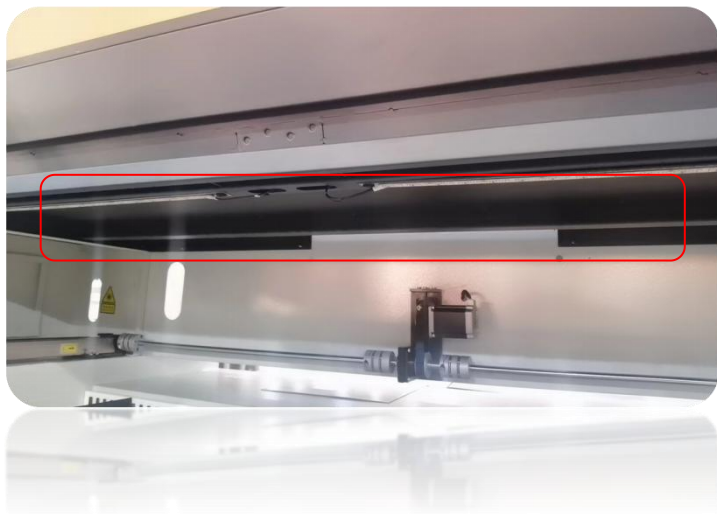

1.0

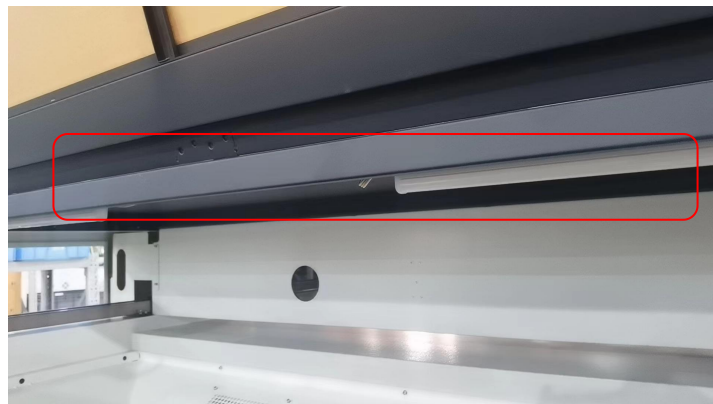

Other upgrades

Change the plastic button to metal button

2.0



1.0



THANK YOU!



广东大族粤铭激光集团股份有限公司
GD HAN'S YUEMING LASER GROUP CO., LTD.